

# INSTALLATION & CARE

## 2018-UP FORD F150 PROJECTOR LED TWO-STYLE HEADLIGHTS INSTALLATION INSTRUCTIONS

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

### PRODUCT NUMBER

1/4" Ratchet	7 mm Socket	8 mm Socket	10 mm Socket
Trim Pad Remover	Plastic Pry bar	1/4" Socket Extension	Needle Nose Plier

2LHP-F15018-SQ-RS

2LHP-F15018BK-SQ-RS

2LHP-F15018JM-SQ-RS

2LHP-F15018G-SQ-RS

### LET'S START THE INSTALLATION



STEP 1

Remove the 14 plastic fastener clips



STEP 2

Remove the plastic radiator cover



STEP 3

Remove the two 7mm molding mounting bolts at the front upper bumper for both sides




STEP 4

Gently pull out the front upper bumper molding from the side for both sides




STEP 5

Remove the front upper bumper molding

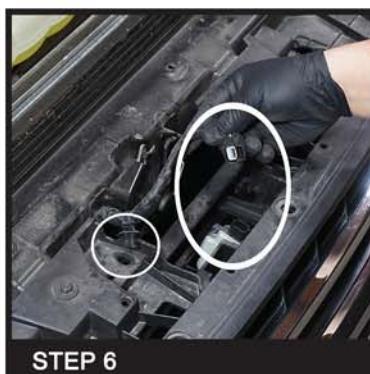

STEP 6

Disconnect the temp sensor harness

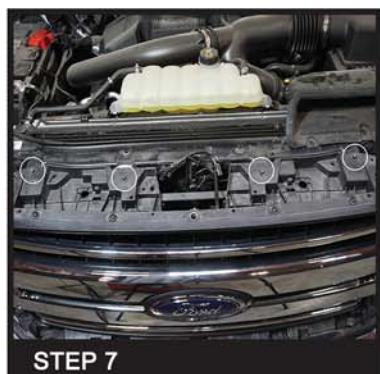

STEP 7

Remove the four 10mm front grille mounting bolts at the top



STEP 8

Remove the 8mm front grille mounting bolt at the bottom of the headlight for both sides



STEP 9

Pull out and remove the front grille



STEP 10

Remove the three 10mm bolts on the upper bumper molding side bracket



STEP 11

Unclip the upper bumper molding side bracket



STEP 12

Remove the upper bumper molding side bracket



STEP 13

Remove the 8mm and the 10mm bolt on the headlight lower support bracket




STEP 14

Separate the air duct with the headlight lower support bracket



STEP 15

Remove the plastic fastener clip and the two 10mm headlight mounting bolt at the top of the headlight

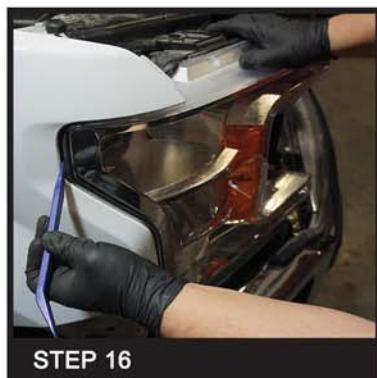

STEP 16

Unseat the factory headlight housing



STEP 17

Disconnect the headlight harness and remove the factory headlight housing




STEP 18

Remove the parking light socket from the OE headlight housing




STEP 19

Remove the light bulbs from the parking light socket

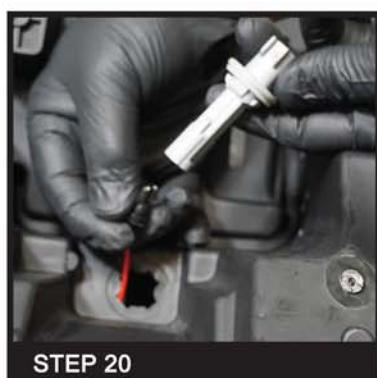

STEP 20

Install the parking light socket to the T10 plug from the new headlight housing, (+) to (+) and (-) to (-)

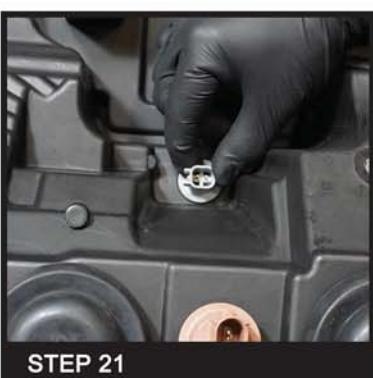


STEP 21

Install the parking light socket to the new headlight housing



STEP 22

Reconnect the headlight harness

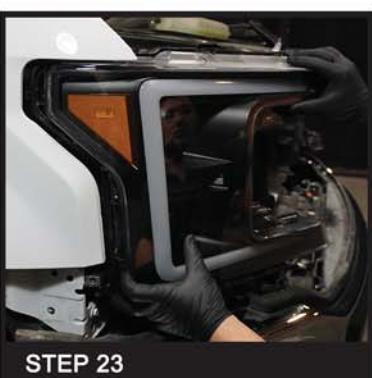

STEP 23

Seat the new headlight assembly in place



STEP 24

Reinstall the plastic fastener clip and the two 10mm headlight mounting bolt at the top of the headlight




STEP 25

Reinstall the air duct



STEP 26

Reinstall the 8mm and the 10mm bolt on the headlight lower support bracket

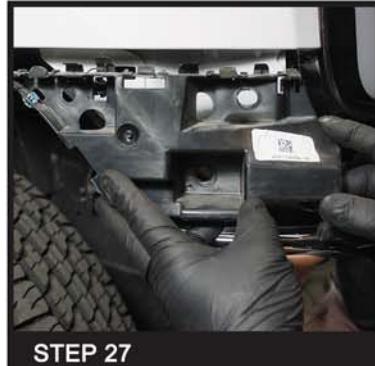

STEP 27

Reinstall the upper molding side bracket




STEP 28

Reinstall the three 10mm bolts on the upper bumper molding side bracket



STEP 29

Please repeat the steps from 10 to 28 for the opposite side

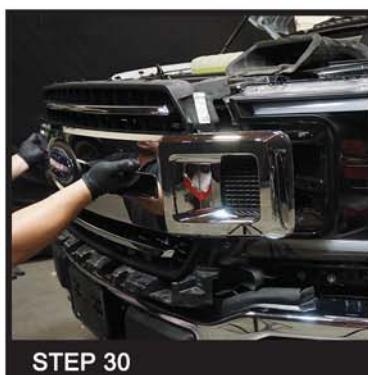


STEP 30

Reinstall the front grille




STEP 31

Reinstall the 8mm front grille mounting bolt at the bottom of the headlight for both sides

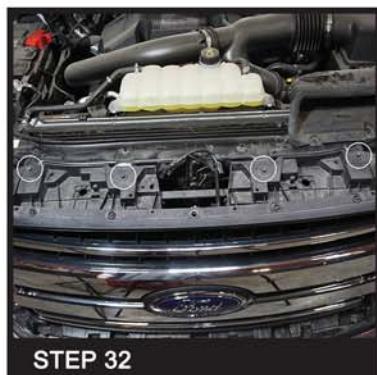


STEP 32

Reinstall the four 10mm front grille mounting bolts at the top

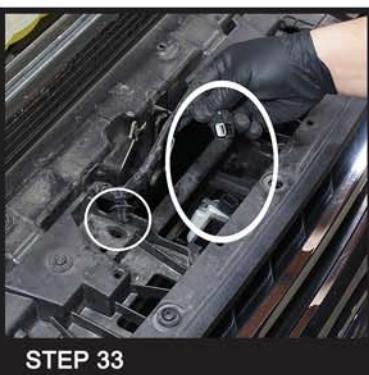


STEP 33

Reconnect the temp sensor harness

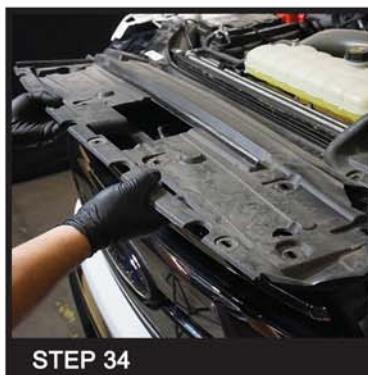

STEP 34

Reinstall the plastic radiator cover

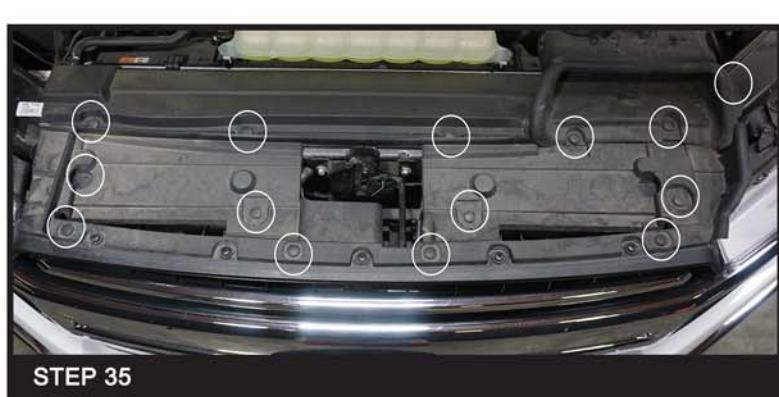

STEP 35

Reinstall the 14 plastic fastener clips



STEP 36

Reinstall the front upper bumper molding



STEP 37

Reinstall the two 7mm front upper bumper molding mounting bolts for both sides



STEP 38



Close the hood and complete the installation

## SEQUENTIAL SIGNAL CONTROL BUTTON INSTRUCTIONS



Style 1: The light bar from top to bottom

Style 2: The light bar from top & bottom to center

Press the button to change the Sequential style when the signal light is off