

# Installation & CARE

## 2006-2011 FORD RANGER TAIL LIGHTS INSTALLATION

### BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver			
			

### PRODUCT NUMBER


LT-RAN06JMLED-TM

LT-RAN06GLED-TM

LT-RAN06CLED-TM



### LET'S START THE INSTALLATIONS

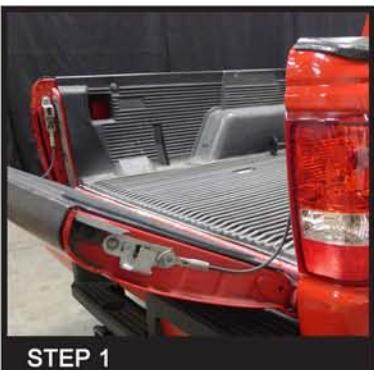


STEP 1




STEP 2

Remove two outer tail light Phillips head screws

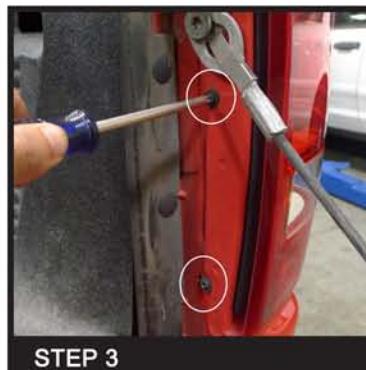


STEP 3

Remove two inner tail light Phillips head screws

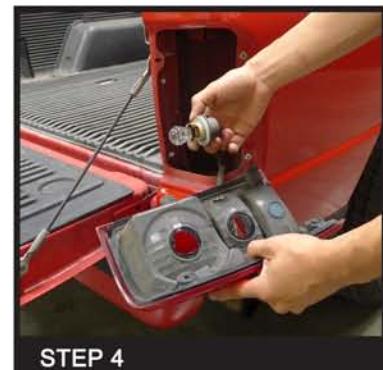


STEP 4

Remove two sockets from tail lights and remove tail light housing

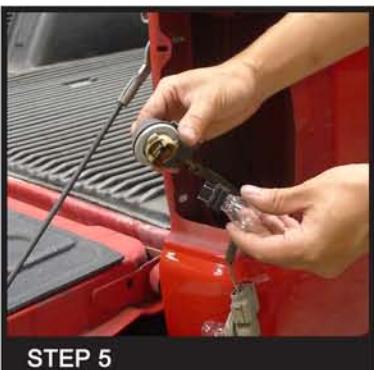


STEP 5

Remove driving light bulb (leave reverse light bulb)

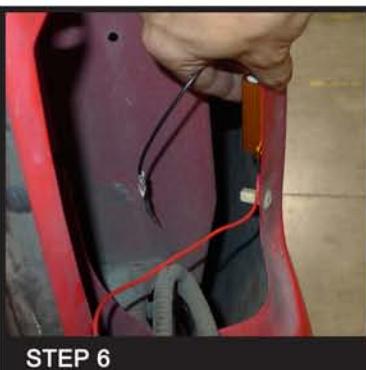


STEP 6

Peel double sided tape and attach resistor to a clean metal area

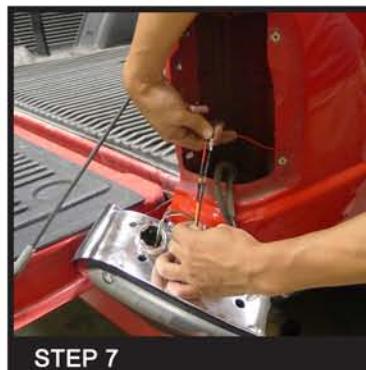

STEP 7

Connect resistor wires to like colors

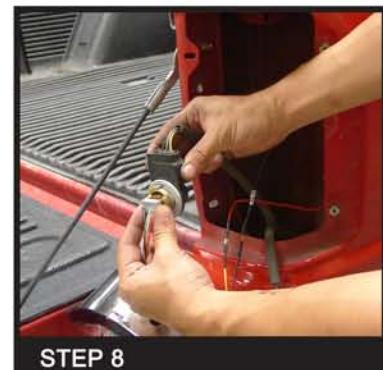

STEP 8

Connect LED harness to main tail light connector



STEP 9

Connect driving light and reverse light sockets to tail light housing




STEP 10

Fasten two outer tail light Phillips head screws



STEP 11

Reinstall two inner tail light Phillips head screws

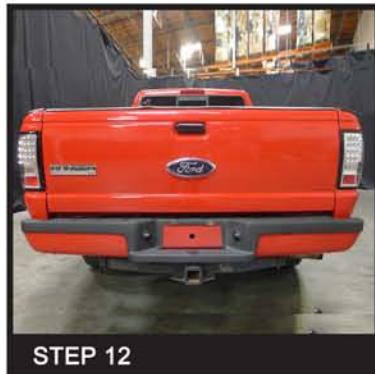

STEP 12

Close tailgate



STEP 13

Please repeat the steps from 2 to 11 for the opposite side



STEP 14

The installation is now complete