

INSTALLATION & CARE

SPEC-D
Tuning

INNOVATE PROFESSIONAL SERVICE

2015-2021 CHEVY COLORADO OE HEADLIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.


TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	10 mm Socket	7 mm Socket	T15 Socket
			
6" Socket Extension			
			

PRODUCT NUMBER

2LH-COL15JM-RS
2LH-COL15SM-RS
2LH-COL15-RS
2LH-COL15OE-RS

LET'S START THE INSTALLATION

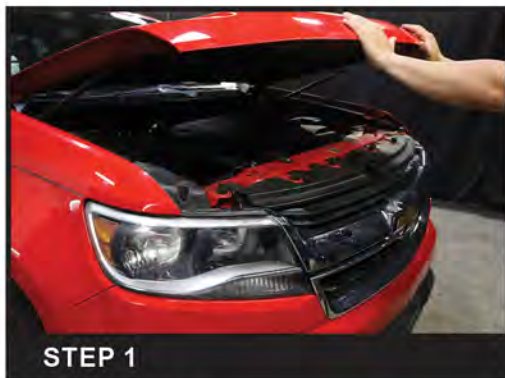

STEP 1

Open the hood



STEP 2

Remove the (6) screws using a T15 Socket



STEP 3

Remove the (2) 10mm mounting bolts located by the license plate bracket



STEP 4

Remove the (2) 10mm mounting bolts underneath the bumper



STEP 5

Remove the (1) 7mm mounting bolt



STEP 6

Remove the (6) screws on the fender liner using a T15 socket



STEP 7

Remove the (1) screw on the fender liner using a T15 socket



STEP 8

Pull the fender liner back



STEP 9

Disconnect the fog light wiring harness connector



STEP 10

Remove the (3) bolts from the inner side of the bumper behind the fender liner using a 7mm socket



STEP 11

Remove the front bumper



STEP 12

Remove the cover by the headlights using a T15 socket to remove the (1) screw and pop the clip off



STEP 13

Remove the (2) mounting bolts above the headlight using a 7mm socket



STEP 14

Remove the (2) mounting bolts below the headlight using a 7mm socket



STEP 15

Remove the headlight



STEP 16

Disconnect the headlight wiring harness connector



STEP 17

Remove the covers from the factory headlight



STEP 18

Remove the covers from the new aftermarket headlight



STEP 19

Remove the Low beam bulb from the factory headlight



STEP 20

Install the Low beam bulb onto the new headlight



STEP 21

Remove the Hi beam bulb from the factory headlight



STEP 22

Install the Hi beam bulb onto the new headlight



STEP 23

Install the headlight covers back on



STEP 24

Remove the turn signal bulb from the factory light



STEP 25

Install the turn signal bulb onto the new headlight socket




STEP 26

Install the turn signal socket back into place



STEP 27

Install the headlight wiring harness connector

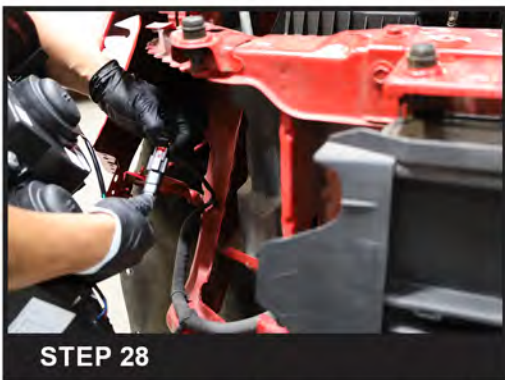


STEP 28

Push the red plastic to lock the connector



STEP 29

Install the new headlight

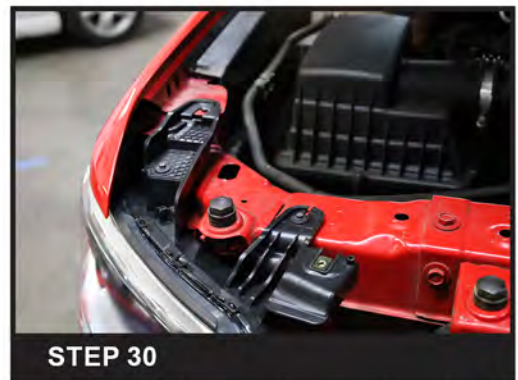

STEP 30

Install the (2) 7mm bolts on the top of the headlight



STEP 31

Install the (2) 7mm bolts on the bottom of the headlight




STEP 32

Repeat all the steps for the other side



STEP 33

Install the front bumper

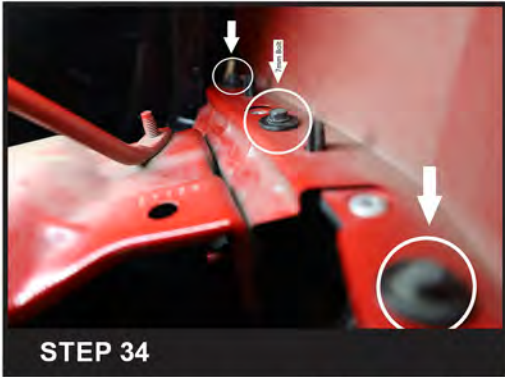

STEP 34

Install the (3) 7mm mounting bolts on the inner side of the bumper




STEP 35

Connect the fog light harness connector



STEP 36

Install the (6) T15 screw back onto the fender liner

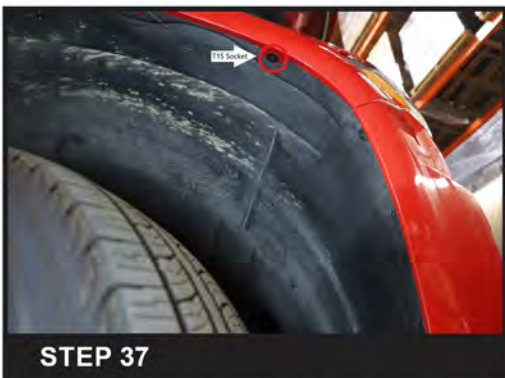

STEP 37

Install the (1) T15 screw on the top of the inner fender



STEP 38

Install the (1) 7mm mounting bolt



STEP 39

Install the (2) 10mm mounting bolts underneath



STEP 40

Install the (2) 10mm mounting bolts by the license plate bracket



STEP 41

Install the (6) T15 screw on top of the grill




STEP 42

Install the headlight cover using the T15 screw and clip



STEP 43

Close the hood

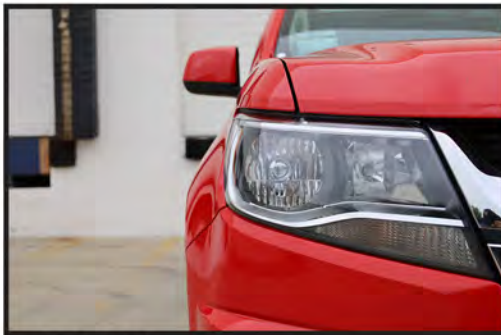

STEP 44

INSTALLATION & CARE

2015-2021 CHEVY COLORADO OE HEADLIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2015-2021 CHEVY COLORADO OE HEADLIGHT INSTALLATION INSTRUCTION



BEAM ADJUSTER