

# INSTALLATION & CARE

## 2015-2021 CHEVY COLORADO OE HEADLIGHT INSTALLATION INSTRUCTION

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	10 mm Socket	7 mm Socket	T15 Socket
6" Socket Extension			

### PRODUCT NUMBER

2LHP-COL15JM-SQ-RS  
2LHP-COL15SM-SQ-RS  
2LHP-COL15-SQ-RS

### LET'S START THE INSTALLATION



**STEP 1**

Open the hood



**STEP 2**

Remove the (6) screws using a T15 Socket



**STEP 3**

Remove the (2) 10mm mounting bolts located by the license plate bracket




**STEP 4**

Remove the (2) 10mm mounting bolts underneath the bumper



**STEP 5**

Remove the (1) 7mm mounting bolt

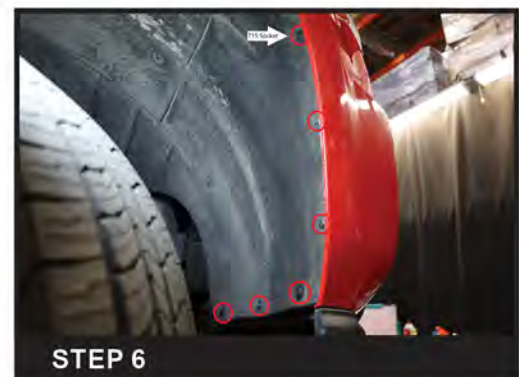


**STEP 6**

Remove the (6) screws on the fender liner using a T15 socket



**STEP 7**

Remove the (1) screw on the fender liner using a T15 socket

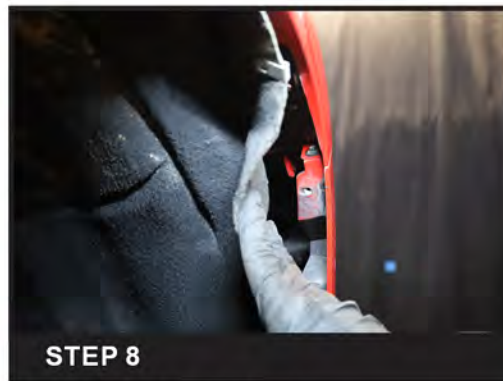


**STEP 8**

Pull the fender liner back



**STEP 9**

Disconnect the fog light wiring harness connector

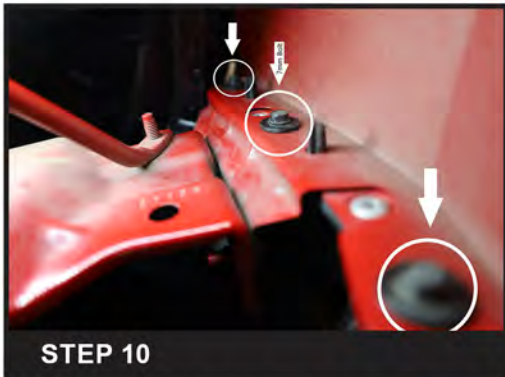

**STEP 10**

Remove the (3) bolts from the inner side of the bumper behind the fender liner using a 7mm socket



**STEP 11**

Remove the front bumper



**STEP 12**

Remove the cover by the headlights using a T15 socket to remove the (1) screw and pop the clip off



**STEP 13**

Remove the (2) mounting bolts above the headlight using a 7mm socket



**STEP 14**

Remove the (2) mounting bolts below the headlight using a 7mm socket



**STEP 15**

Remove the headlight



**STEP 16**

Disconnect the headlight wiring harness connector



**STEP 17**

Remove the low beam cover from the factory headlight



**STEP 18**

Remove the low beam cover from the new aftermarket headlight



**STEP 19**

Remove the low beam light bulb socket from the factory headlight



**STEP 20**

Remove the low beam bulb from the light socket



**STEP 21**

Install the low beam light bulb into the new headlight socket



**STEP 22**

Install the low beam bulb onto the new headlight



**STEP 23**

Install the headlight covers back on



**STEP 24**

Locate the fuse box and remove the cover



**STEP 24A**

Cut a small notch on the fuse box to allow the ACC wire to run through



**STEP 25**

Locate the 10amp fuse with ACC power (F17 Fuse)



**STEP 26**

Remove the 10-amp fuse from the F17 fuse location



**STEP 27**

Install the provided ACC wire in the open F17 fuse location



**STEP 28**

Install the fuse cover back on



**STEP 29**

Zip-tie the provide ACC wire along the subframe \*Keep clear of hot or moving objects



**STEP 30**

Run the provide ACC wire along the subframe \*Keep clear of hot or moving objects



**STEP 31**

Plug in the headlight wiring harness connector



**STEP 32**

Plug in the ACC wire connector to the headlight




**STEP 33**

Install the (2) 7mm bolts on the top of the headlight




**STEP 34**

Install the (2) 7mm bolts on the bottom of the headlight

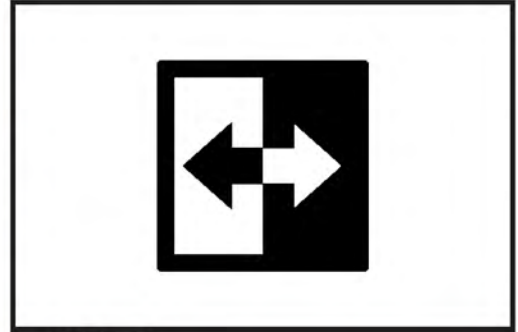


**STEP 35**

Repeat all the steps for the other side

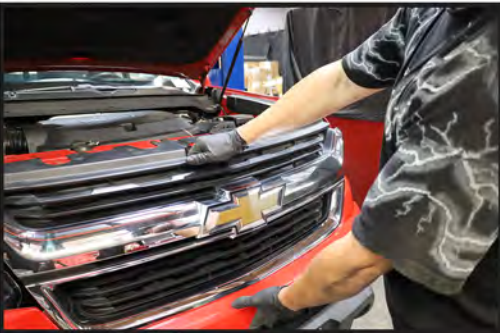

**STEP 36**

Install the front bumper

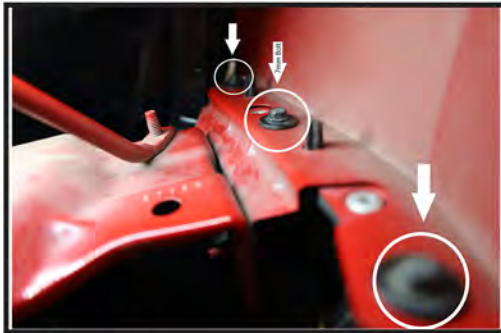

**STEP 37**

Install the (3) 7mm mounting bolts on the inner side of the bumper



**STEP 38**

Connect the fog light harness connector




**STEP 39**

Install the (6) T15 screw back onto the fender liner



**STEP 40**

Install the (1) T15 screw on the top of the inner fender

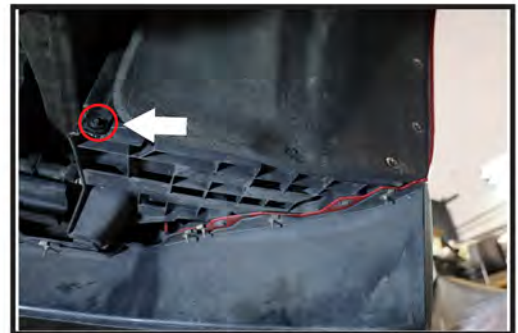

**STEP 41**

Install the (1) 7mm mounting bolt




**STEP 42**

Install the (2) 10mm mounting bolts underneath



**STEP 43**

Install the (2) 10mm mounting bolts by the license plate bracket

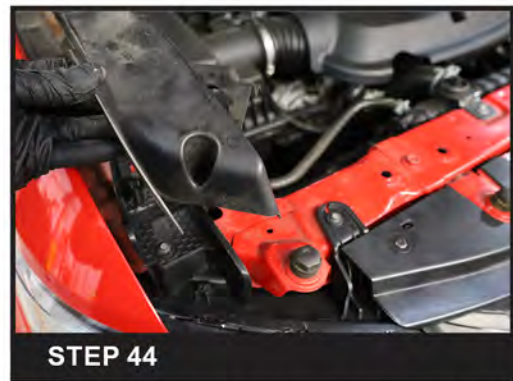


**STEP 44**

Install the headlight cover using the T15 screw and clip




**STEP 45**

Install the (6) T15 screw on top of the grill

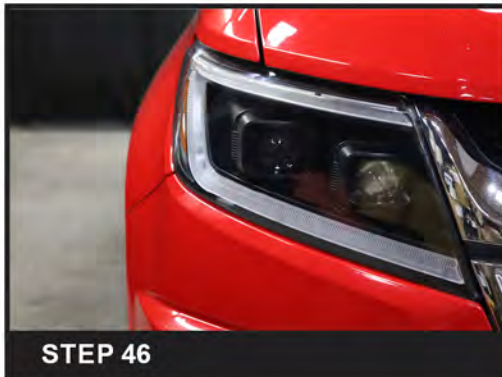

**STEP 46**

Close the hood

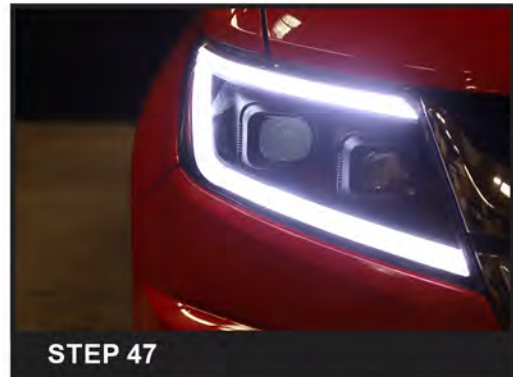

**STEP 47**

## 2015-2021 CHEVY COLORADO OE HEADLIGHT INSTALLATION INSTRUCTION

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

## 2015-2021 CHEVY COLORADO OE HEADLIGHT INSTALLATION INSTRUCTION



**BEAM ADJUSTER**