

INSTALLATION & CARE

2013 DODGE CHARGER HEADLIGHTS RS MODEL INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	10 mm Socket	7 mm Socket	Phillips Screwdriver
			
Trim Pad Remover	Plastic Pry Bar	8 mm Socket	6" Socket Extension
			

PRODUCT NUMBER

2LHP-CHG11JM-SQ-RS
2LHP-CHG11SM-SQ-RS
2LHP-CHG11-SQ-RS

LET'S START THE INSTALLATION




Remove the (6) 7mm bolts




Remove bottom pop clip



Remove top pop clip

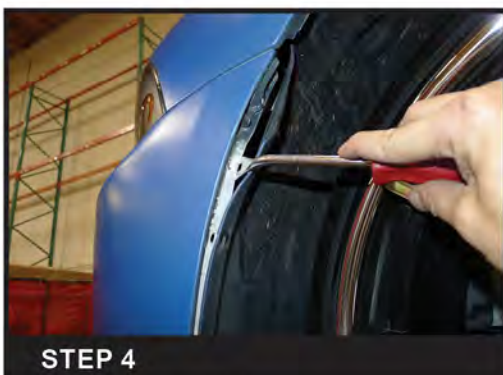

Pull fender liner aside

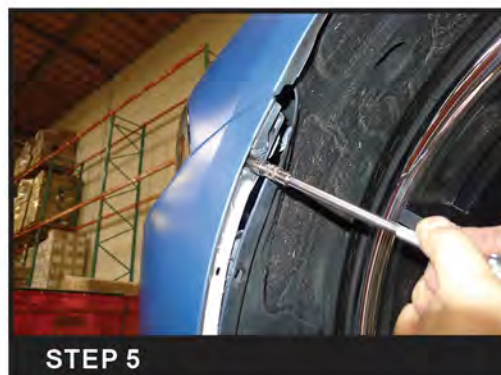

Remove the 10mm bolt




Remove left side of the radiator support cover by pulling up to pop off clips



STEP 7

Remove right side of the radiator support cover by pulling up to pop off clips

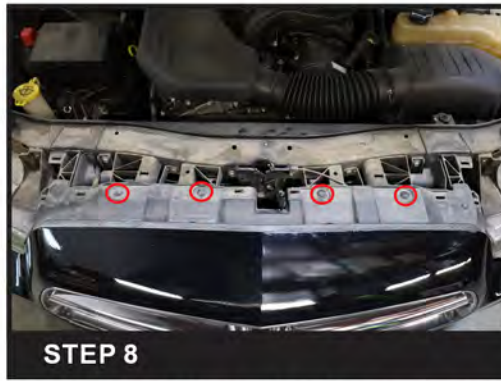

STEP 8

Use Trim Pad Removal tool to remove the (4) clips



STEP 9

Remove front bumper



STEP 10

Remove the (2) 8mm bolts on top



STEP 11

Remove the (2) 8mm bolt on the bottom



STEP 12

Remove the headlight and unplug the (3) headlight wiring harness plugs



STEP 13

Remove the rubber hi/low beam cover



STEP 14

Remove the high beam plastic cover on your OEM headlights



STEP 15

Remove the high beam bulb from your OEM headlights by turning the light bulb counter-clockwise




STEP 16

Unplug the light bulb by pulling the tabs back to release the lock



STEP 17

Remove your factory high beam light bulb

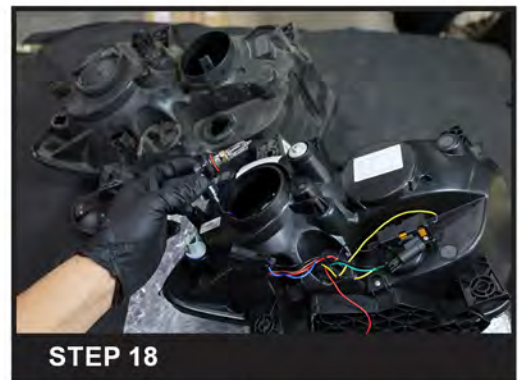

STEP 18

Install the bulb into the new headlight hi/low beam connector



STEP 19

Install bulb by turning clock-wise




STEP 20

Run the provided ACC wire along the radiator core support and place a zip tie. ***Avoid placing near any hot or moving parts**



STEP 21

Run the provided ACC wire along the radiator core support and place a zip tie. ***Avoid placing near any hot or moving parts**

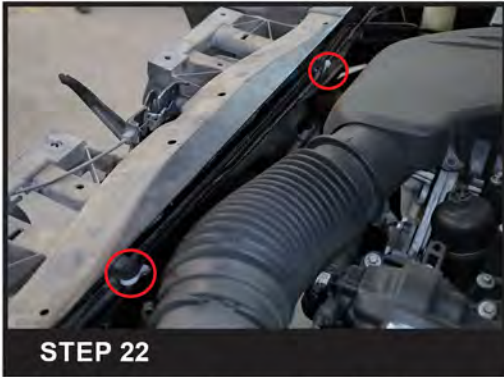

STEP 22

Run the provided ACC wire along the radiator core support and place a zip tie. ***Avoid placing near any hot or moving parts**



STEP 23

Run the provided ACC wire along the radiator core support and place a zip tie. ***Avoid placing near any hot or moving parts**



STEP 24

Locate the fuse box



STEP 25

Remove the fuse box cover



STEP 26

Remove the #38 Fuse 10amp fuse that is under ACC power



STEP 27

Install the #38 Fuse 10amp fuse removed from the fuse box into the provide ACC harness



STEP 28

***10amp fuse shown installed in ACC wire**



STEP 29

Install the ACC harness into the open ACC fuse port



STEP 30

***ACC fuse tap harness shown installed**




STEP 31

Reinstall the fuse box cover onto the fuse box



STEP 32

Begin installing the new headlights

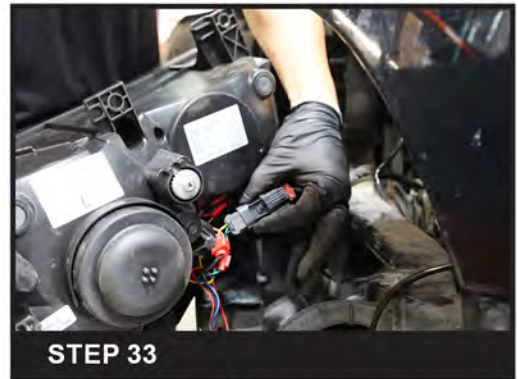

STEP 33

Plug in the headlight wiring harness connector



STEP 34

Plug in the headlight wiring harness connector



STEP 35

Plug in the ACC wire



STEP 36

Plug in the headlight wiring harness connector




STEP 37

Install the new headlight



STEP 38

Install the (2) 8mm bolts on top

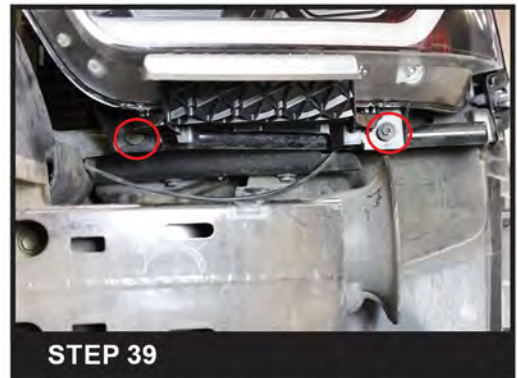


STEP 39

Install the (2) 8mm bolt on bottom




STEP 39A

Repeat Steps for other side

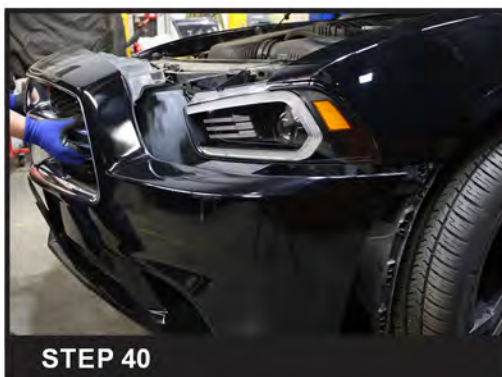

STEP 40

Install front bumper

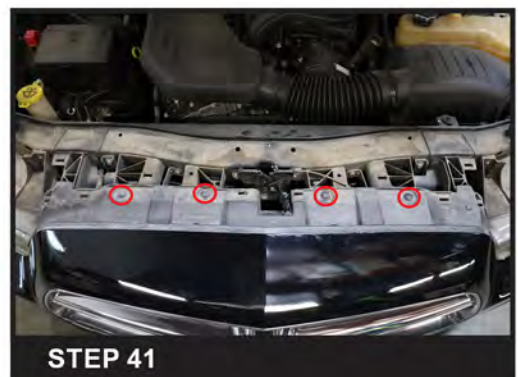

STEP 41

Install (4) clips



STEP 42

Install right side of the radiator support cover




STEP 43

Install left side of the radiator support cover




STEP 44

Install bottom clip

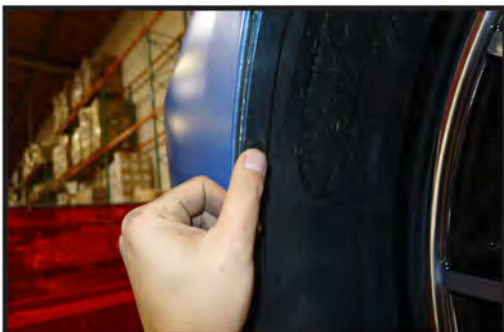

STEP 45

Install top clip

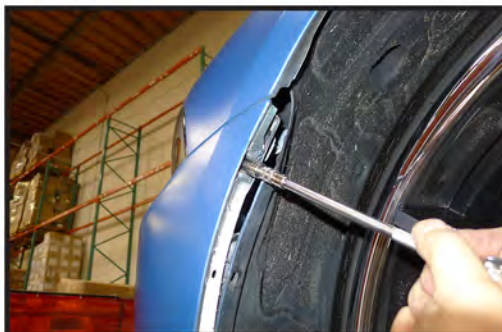

STEP 46

Install 10mm bolt



STEP 47

Install (6) 7mm bolts



STEP 48

Close hood


INSTALLATION & CARE

2013 DODGE CHARGER HEADLIGHTS RS MODEL INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2013 DODGE CHARGER HEADLIGHTS RS MODEL INSTALLATION INSTRUCTION

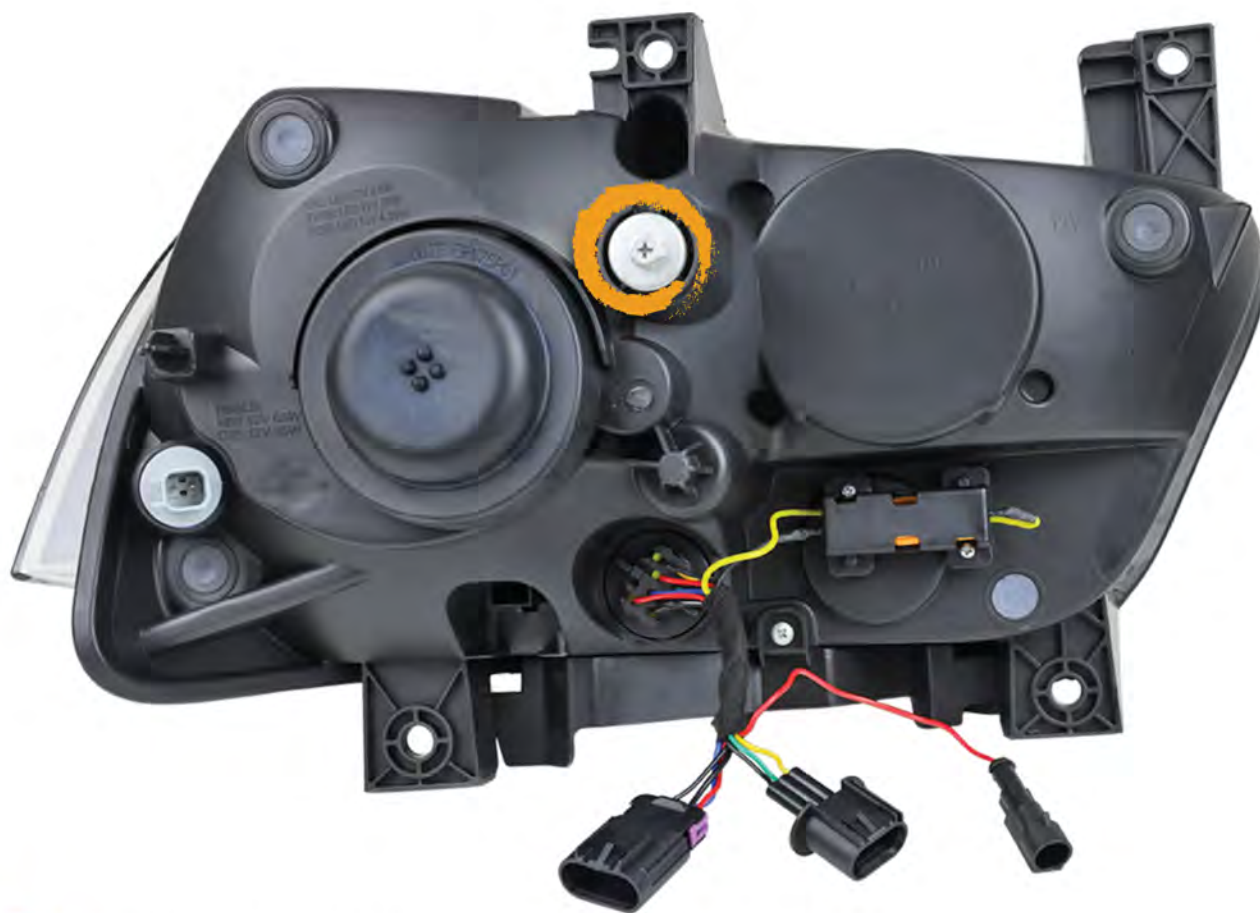

BEAM ADJUSTER