

SPEC-D *Tuning*

2011-2014 DODGE CHARGER FRONT LOWER LIP INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED



Drill

1/4" Drill Bit



Center Punch

Rivet Tool

Product Part Numbers:

LPF-CHG11-ABS



2011-2014 DODGE CHARGER FRONT LOWER LIP INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Place the front lip up against the bottom edge of the front bumper



2. Temporarily tape the lip into the position




3. Measure the distance between the lip and leading the edge of the lower bumper



4. Measure and position the lip with even spacing from the leading edge of the bumper



5. Hook the locating tab against the edge of the bumper.

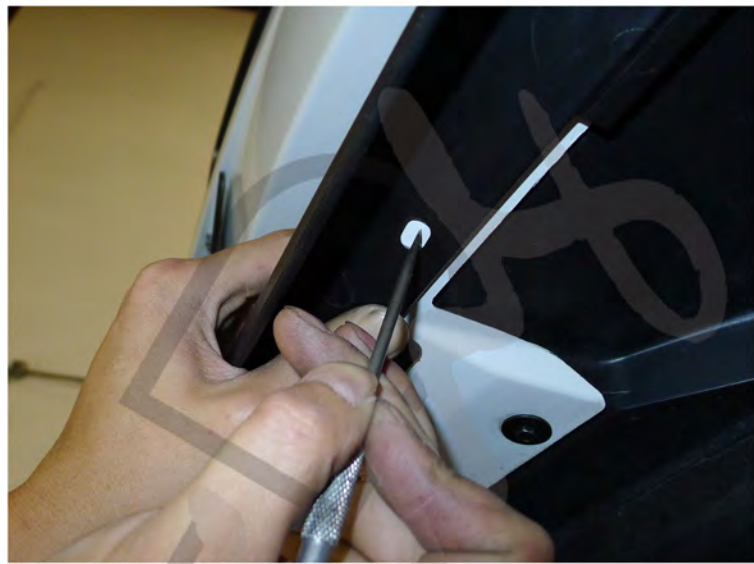

6. Mark the bumper through each mounting hole center using a punch



7. Drill with a .25 in drill bit



8. Place the plastic rivet into each mounting hole.



10. Install an ssecure front lip using 11 plastic rivets



10. The installation now is complete