



# 1997-2004 DODGE DAKOTA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.

Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



## TOOLS AND SUPPLIES REQUIRED

7" Long  $\frac{1}{4}$ " Drive Extension

10mm Socket

T10 Torx Socket

$\frac{1}{4}$ " Drive Ratchet

If your Headlight is Halo type, you also need:

Wire Stripper

Wire Crimper

4 Blue Quick Splice Wire Connectors

4 Blue Male Quick Wire Connectors

4 Blue Female Quick Wire Connectors

2 Red Wires (8 inch)

2 Black Wires (8 inch)

## Product Part Numbers:

2LHP-DAK97-TM

2LHP-DAK97B-TM

2LHP-DAK97JM-TM

2LHP-DAK97JMB-TM



**1997-2004**  
**DODGE DAKOTA PROJECTOR HEADLIGHTS**  
**INSTALLATION INSTRUCTIONS**

If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.

Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Remove the rubber weather seal from fender (1 plastic clip)




2. Unscrew one T10 Torx head screw



3. Remove one 10mm bolt



4. Unplug all socket from the bumper light and remove the bumper light

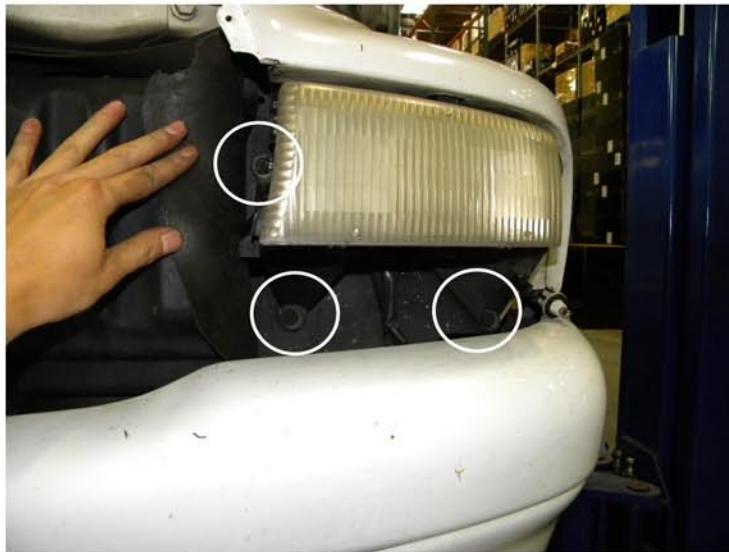

5. Remove three 10mm headlight bolts



6. Disconnect the headlight harness and remove the headlight



7. Put back the harness and three 10mm headlight bolts



8. Put back the rubber weather shield onto fender



9. Please repeat the steps from 1 to 8 for the opposite side



10. The installation is now complete