

INSTALLATION & CARE

SPEC-D
Tuning

INNOVATE

PROFESSIONAL

SERVICE

2019-UP DODGE RAM 2500 PROJECTOR HEADLIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	10 mm Socket	Trim Pad Remover	Flathead Screwdriver
6" Socket Extension	24" Socket Extension		

PRODUCT NUMBER

2LHP-RAM1925-TM
2LHP-RAM1925G-TM
2LHP-RAM1925JM-TM
2LHP-RAM1925SM-TM

LET'S START THE INSTALLATION



STEP 1A



STEP 1B



STEP 1C

Remove the fourteen plastic fasteners on the radiator upper support cover


Remove the fourteen plastic fasteners on the radiator upper support cover

Remove the fourteen plastic fasteners on the radiator upper support cover



STEP 2

Remove the radiator upper support cover

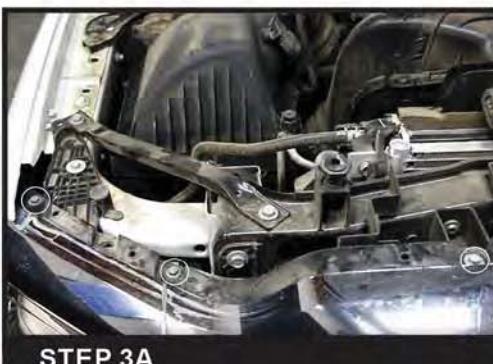

STEP 3A

Remove the ten 10mm bolts at the top of the upper grille trim




STEP 3B

Remove the ten 10mm bolts at the top of the upper grille trim



STEP 3C

Remove the ten 10mm bolts at the top of the upper grille trim

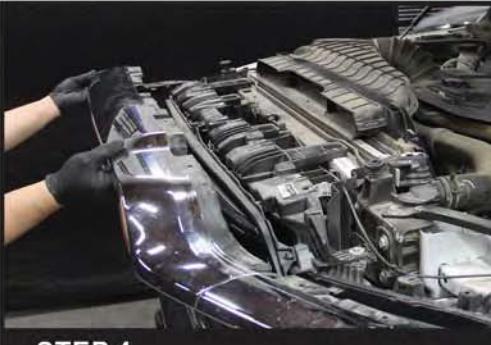

STEP 4

Remove the upper grille trim



STEP 5A

Grab the edge with both hands and pull forward to remove the body trim, it's a little difficult to take out



STEP 5B

Grab the edge with both hands and pull forward to remove the body trim, it's a little difficult to take out



STEP 5C

Grab the edge with both hands and pull forward to remove the body trim, it's a little difficult to take out




STEP 6

Remove the two 10mm bolts on the lower grille trim, one on each side



STEP 7A

Remove the seven 10mm nuts on the lower grille trim from underneath the front bumper

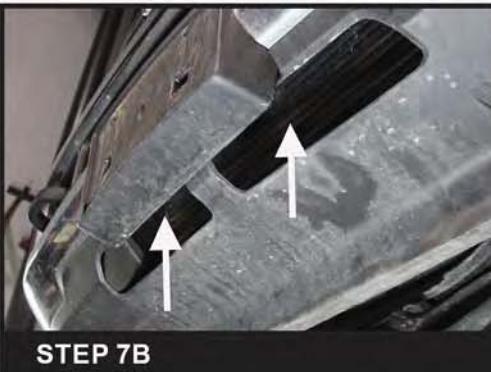

STEP 7B

Remove the seven 10mm nuts on the lower grille trim from underneath the front bumper



STEP 7C

Remove the seven 10mm nuts on the lower grille trim from underneath the front bumper



STEP 7D

Remove the seven 10mm nuts on the lower grille trim from underneath the front bumper



STEP 7E

Remove the seven 10mm nuts on the lower grille trim from underneath the front bumper



STEP 7F

Remove the seven 10mm nuts on the lower grille trim from underneath the front bumper



STEP 8

Remove the lower grille trim



STEP 9A

Remove the eight 10mm bolts at the bottom of the front grille, four on each side



STEP 9B

Remove the eight 10mm bolts at the bottom of the front grille, four on each side



STEP 10A

Remove the six 10mm bolts at the top of the front grille



STEP 10B

Remove the six 10mm bolts at the top of the front grille



STEP 11

Unseat the front grille upper leg



STEP 12

Remove the front grille




STEP 13A

Remove the plastic fastener at the bottom of the headlight, in between the fender and front bumper



STEP 13B

Remove the plastic fastener at the bottom of the headlight, in between the fender and front bumper

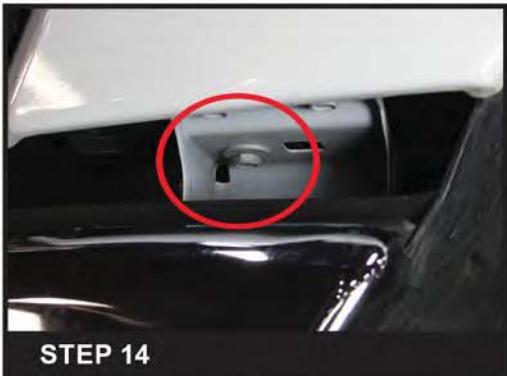

STEP 14

Remove the 10mm bolt at the bottom of the headlight, in between the fender and front bumper



STEP 15

Remove the 10mm bolt and the plastic fastener at the top of the headlight



STEP 16A

Disconnect the headlight harness



STEP 16B

Disconnect the headlight harness



STEP 17

Remove the factory headlight housing



STEP 18

Remove the two T15 bolts and the 10mm bolt on the headlight lower bracket



STEP 19

Remove the headlight lower bracket



STEP 20

Install the headlight lower bracket to the new headlight housing



STEP 21

Reinstall the two T15 bolts and the 10mm bolt



STEP 22A

Connect the headlight harness to the new headlight



STEP 22B

Seat the new headlight assembly in place



STEP 23

Reinstall the 10mm bolt and the plastic fastener at the top of the headlight




STEP 24

Reinstall the 10mm bolt at the bottom of the headlight in between the fender and front bumper



STEP 25

Reinstall the plastic fastener at the bottom of the headlight in between the fender and front bumper

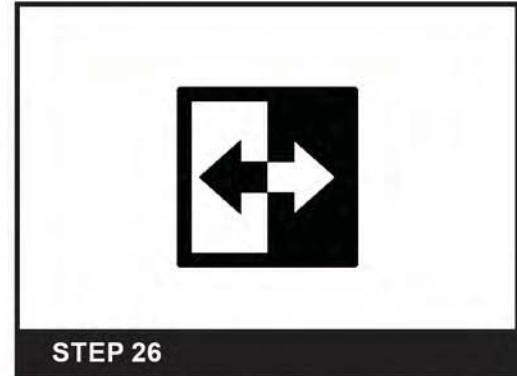

STEP 26

Please repeat the steps from 13 to 25 for the opposite side



STEP 27A

Reinstall the front grille



STEP 27B

Attach the front grille upper leg



STEP 28A

Reinstall the six 10mm bolts at the top of the front grille



STEP 28B

Reinstall the six 10mm bolts at the top of the front grille



STEP 29A

Reinstall the eight 10mm bolts at the bottom of the front grille, four on each side



STEP 29B

Reinstall the eight 10mm bolts at the bottom of the front grille, four on each side



STEP 30

Reinstall the lower grille trim



STEP 31A

Reinstall the seven 10mm nuts on the lower grille trim from underneath the front bumper




STEP 31B

Reinstall the seven 10mm nuts on the lower grille trim from underneath the front bumper



STEP 32

Reinstall the two 10mm bolts on the lower grille trim, one on each side

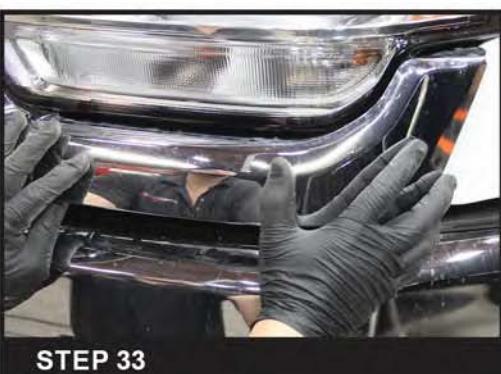

STEP 33

Reinstall the body trim



STEP 34

Reinstall the upper grille trim



STEP 35A

Reinstall the ten 10mm bolts at the top of the upper grille trim



STEP 35B

Reinstall the ten 10mm bolts at the top of the upper grille trim



STEP 35C

Reinstall the ten 10mm bolts at the top of the upper grille trim



STEP 36

Reinstall the radiator upper support cover



STEP 37A

Reinstall the fourteen plastic fasteners on the radiator upper support cover



STEP 37B

Reinstall the fourteen plastic fasteners on the radiator upper support cover



STEP 37C

Reinstall the fourteen plastic fasteners on the radiator upper support cover



STEP 38

Close the hood to complete the installation

