

Installation & CARE

SPEC-D
Tuning

INNOVATE

PERFECTIONAL

SERVICE

2002-2008 DODGE RAM OE STYLE FENDER FLARES INSTALLATION

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

TOOLS AND SUPPLIES REQUIRED


Drill	6mm (1/4") Bit	3mm (1/8") Bit	1/4" Ratchet
			
8mm socket			
			

PRODUCT NUMBER


FDF-RAM02BK




LET'S START THE INSTALLATIONS

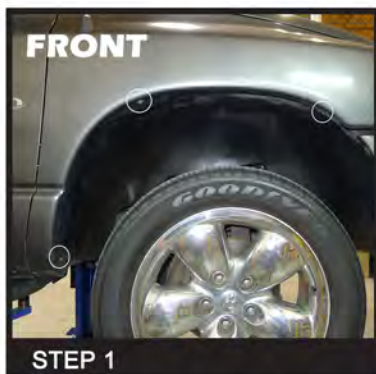


Remove (3) 8mm front wheel well liner bolts

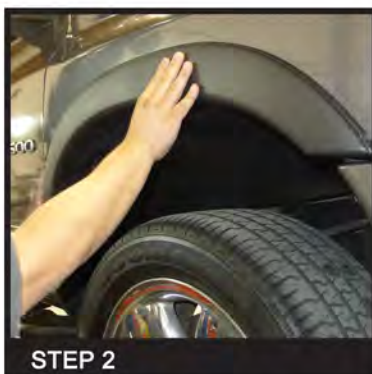


Place the front fender flare in the location

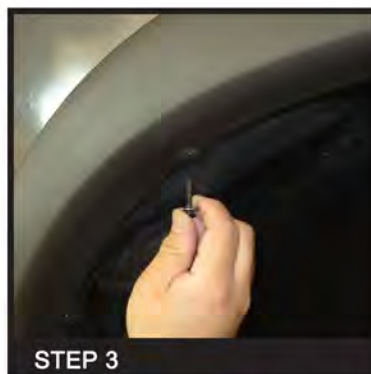


Secure (3) 8mm front wheel well liner bolts

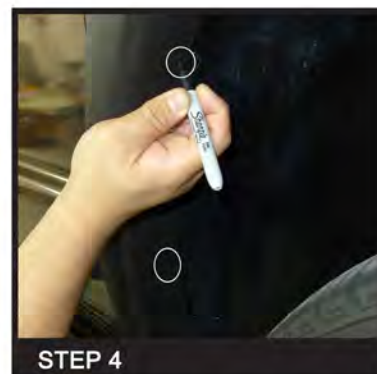


Mark (4) location on fender for drill the hole

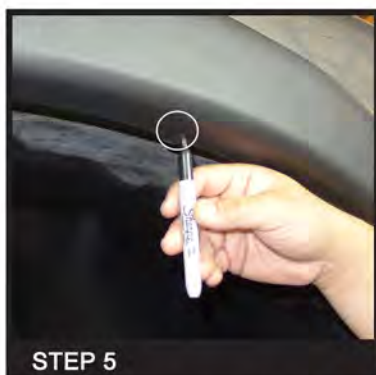


Mark (4) location on fender for drill the hole

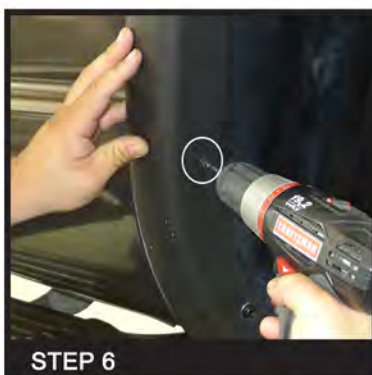

Drill (4) 3mm pilot hole on the fender

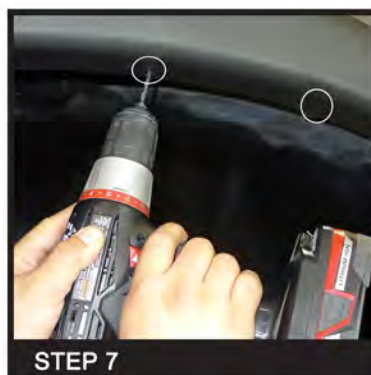

Drill (4) 3mm pilot hole on the fender

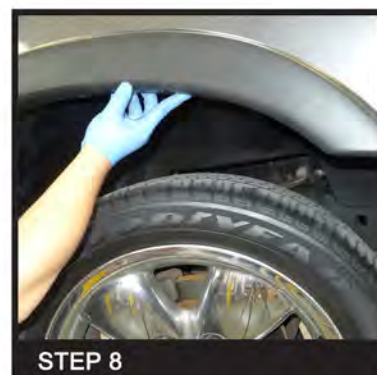


Remove (3) 8mm front wheel well liner bolts then remove the fender flare



STEP 9

Drill the 6mm over the 3mm pilot hole

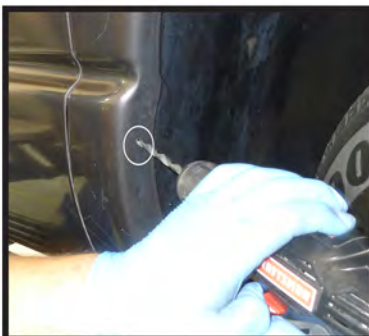

STEP 10

Drill the 6mm over the 3mm pilot hole



STEP 11

Attach (3) bolt clip on the hole



STEP 12

Attach the 3 bolt clip on the hole



STEP 13

Reinstall the front fender flare



STEP 14

Install (6) 8mm fender flare bolts



STEP 15

Attach the fastener to top center bolt hole



STEP 16

Front fender flare complete



STEP 17

Remove (2) 8mm rear wheel well bolts



STEP 18

Attach (2) bolt clip on the hole




STEP 19

Place the rear fender flare in the position




STEP 20

Secure (4) 8mm fender bolts

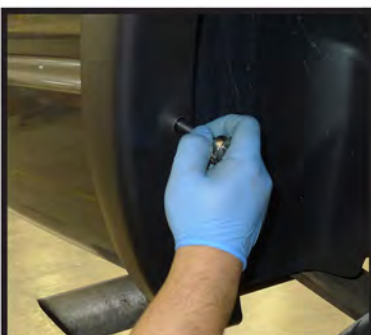

STEP 21

Secure (4) 8mm fender bolts

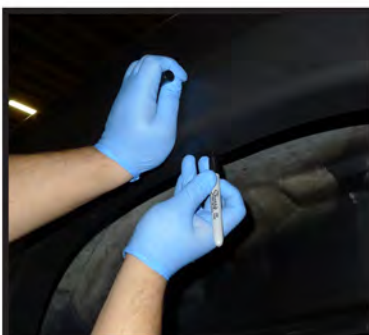

STEP 22

Mark the (3) pilot hole drilling location



STEP 23

Drill the 3mm pilot hole in marked locations



STEP 24

Unbolt and remove the rear fender flare after drilling pilot holes



STEP 25

Drill the 6mm hole over pilot holes




STEP 26

Attach (3) bolt clips to new bolt holes



STEP 27

Place the rear fender flare in the position again

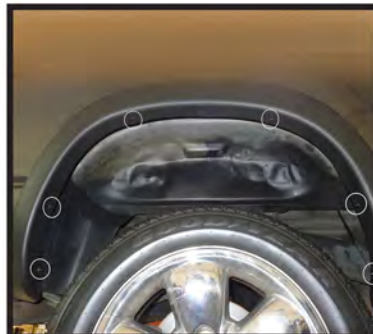


STEP 28

Secure (6) 8mm fender flare bolts



STEP 29

Attach the fastener to the top center bolt hole

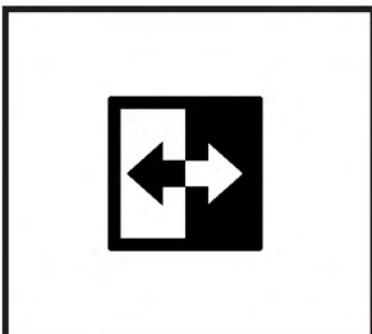

STEP 30

Please repeat the steps from 1 to 29 for the opposite side



STEP 31

The installation is now complete