



2005-2009 FORD MUSTANG SLOTTED WINDOW LOUVER INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Scissors

Towel

Product Part Numbers:

WLUQ-MST05B



2005-2009 FORD MUSTANG

SLOTTED WINDOW LOUVER

INSTALLATION INSTRUCTIONS




If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.

Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

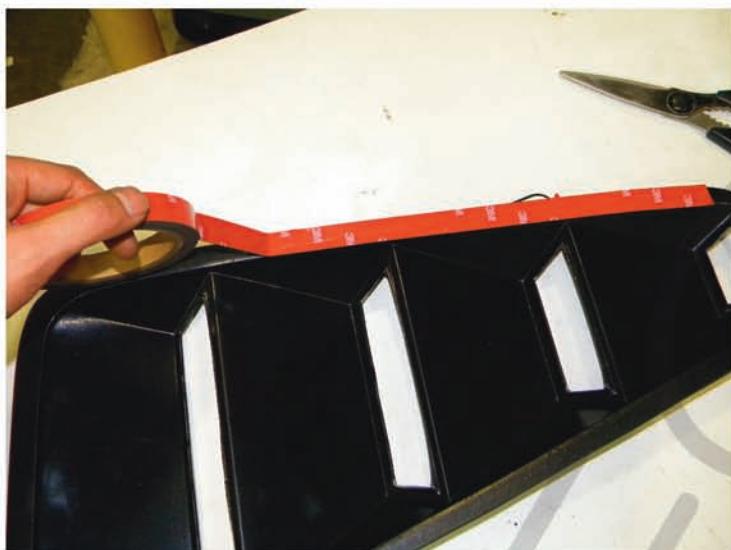

1. Apply double sided foam tape to the edge of the louver



2. Cut the foam tape to length



3. Wipe the window surface clean



4. Peel off the backing



5. Apply and press louver onto window firming



6. Please repeat the steps from 1 to 5 for the opposite side



7. The installation is now complete

