

# SPEC-D *Tuning*

## GENERAL AIR HORN RED MUSIC TRUMPET X5 AIR HORN INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet

10mm Socket

6" Extension

### Product Part Numbers:

AH-605



# GENERAL AIR HORN RED MUSIC TRUMPET X5 AIR HORN INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (8) 10mm bolt locations



2. Remove the (8) 8mm bolts



3. Pull aside the fender liner



4. Remove the (2) 10mm bolts






5. (6) plastic clip locations



6. Remove the (6) plastic clips

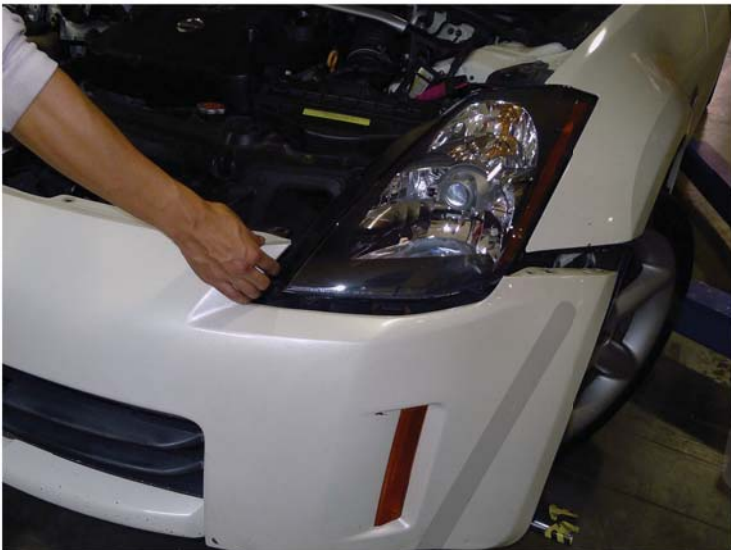

7. Remove the front bumper



8. Stock horn location



9. Disconnect the stock horns



10. Remove the stock horns





11. Attach the bracket to the air compressor



12. Mount the air compressor onto the car



13. Connect the power to the air compressor



14. Connect the power to the air compressor



15. Attach the air horns to the bracket



16. Install the air hose to the air horns





17. Install the air hose to the air horns



18. Attach the air horns to the car



19. Connect the air hose to the air compressor



20. Replace the front bumper



21. Replace the (6) plastic clips



22. Tighten the (2) 10mm bolts



23. Tighten the (8) 10mm bolts. The installation is now complete