

# INSTALLATION & CARE

## 2005-2011 TOYOTA TACOMA PROJECTOR HEADLIGHT INSTALLATION INSTRUCTIONS

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	10 mm socket	Phillips Screwdriver	Flathead screwdriver
			
Trim Pad Remover	Plastic Pry bar	Needle Nose Plier	
			

### PRODUCT NUMBER

2LHP-TAC06-SQ-RS  
2LHP-TAC06JM-SQ-RS  
2LHP-TAC06SM-SQ-RS  
2LHP-TAC06G-SQ-RS



### LET'S START THE INSTALLATION



**STEP 1**

Remove the two plastic retainers and the two 10mm bolts




**STEP 2A**

Unlock the two clips that hold the front grille



**STEP 2B**

Unlock the two clips that hold the front grille

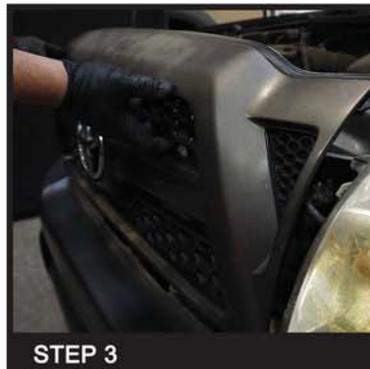

**STEP 3**

Unseat the front grille



**STEP 4**

Remove the plastic retainer



**STEP 5**

Remove the headlight filler trim panel




**STEP 6**

Remove the front bumper



**STEP 7**

Remove the plastic retainer at the side of the front bumper

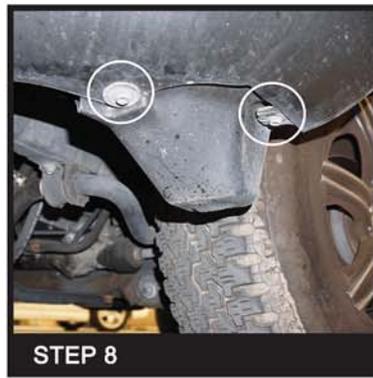

**STEP 8**

Remove the two 10mm bolts



**STEP 9**

Pull out the wheel liner



**STEP 10**

Remove the 10mm headlight bolt inside the bumper



**STEP 11**

Remove the three 10mm headlight bolts



**STEP 12**

Disconnect the headlight harness and remove the factory headlight housing



**STEP 13**

Remove the parking light socket from the factory headlight and install to the new headlight housing




**STEP 14**

Remove the signal light socket from the factory headlight and install to the new headlight housing



**STEP 15**

Connect the headlight harness and seat the new headlight assembly in place

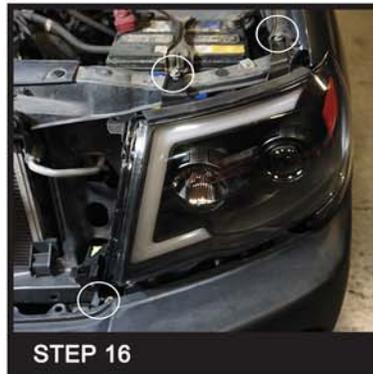

**STEP 16**

Reinstall the three 10mm headlight bolts



**STEP 17**

Reinstall the 10mm headlight bolt inside the bumper




**STEP 18**

Reinstall the wheel liner



**STEP 19**

Reinstall the plastic retainer

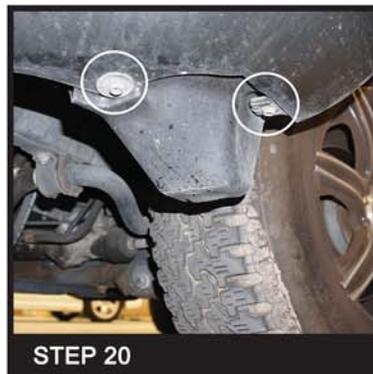

**STEP 20**

Reinstall the two 10mm bolts




**STEP 21**

Reinstall the headlight filler trim panel and the plastic retainer



**STEP 22**

Reinstall the three plastic retainers

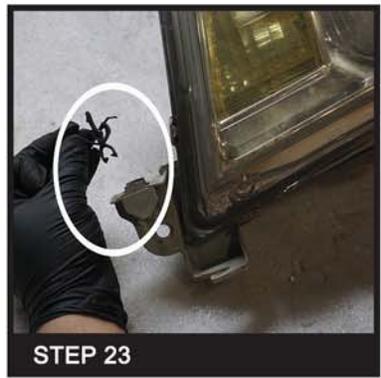

**STEP 23**

Remove the front grille locking clip from the factory headlight housing



**STEP 24**

Reinstall the front grille locking clip to the new headlight housing



**STEP 25**

Please repeat the steps from 4 to 24 for the opposite side




**STEP 26**

Reinstall the front grille



**STEP 27**

Reinstall the two plastic retainers and two 10mm bolts

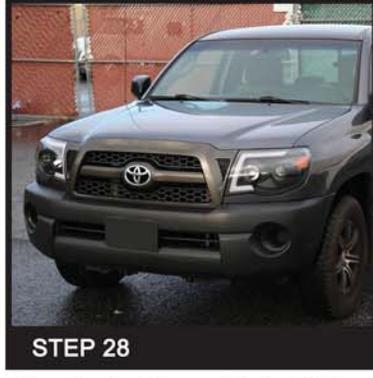

**STEP 28**

Close the hood to complete installation



# INSTALLATION & CARE

SPEC-D  
Tuning

INNOVATE    PROFESSIONAL    SERVICE

## 2005-2011 TOYOTA TACOMA PROJECTOR HEADLIGHT INSTALLATION INSTRUCTIONS

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

## 2005-2011 TOYOTA TACOMA PROJECTOR HEADLIGHT INSTALLATION INSTRUCTIONS



 **High/Low Beam  
Adjustment screws**