

Installation & CARE

2005-2015 TOYOTA TACOMA LED TAIL LIGHTS / TAIL LIGHTS INSTALLATION

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED


¼" Ratchet	Trim Pad Remover	10 mm socket	
			

PRODUCT NUMBER


LT-TAC09JMLED-RS
LT-TAC09CLED-RS




LET'S START THE INSTALLATIONS

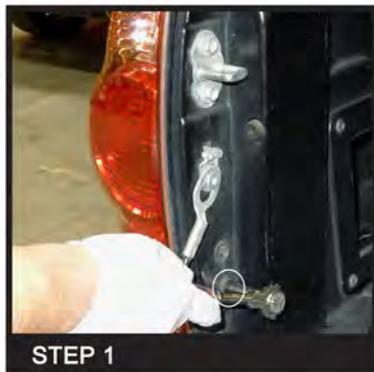


Remove the (2) 10mm bolt

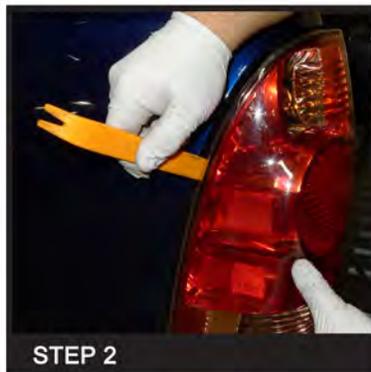

Remove the factory tail light

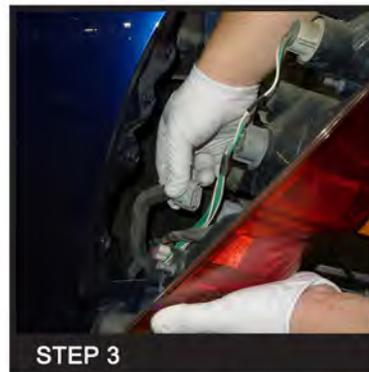

Disconnect the tail light harness

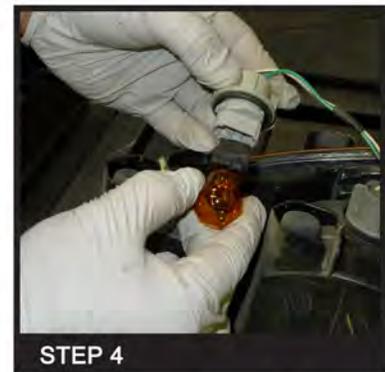


Transfer the signal light bulb to the new tail light




Transfer the back up light bulb to the new tail light




Connect tail light harness. Please see the "L.E.D. tail lights installation instruction" If your tail lights don't have L.E.D. You can skip the installation instruction.

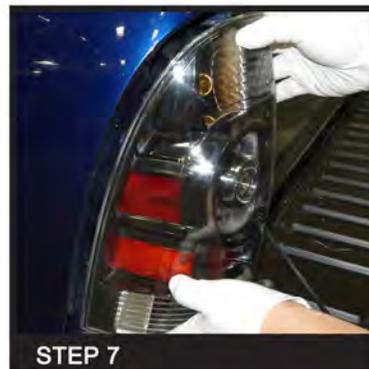

Place the new LED tail light in the stock location

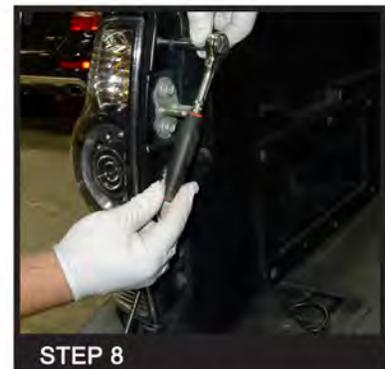

Tighten (2) 10mm bolt

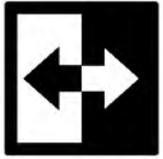

STEP 9

Please repeat the steps from 1 to 8 for the opposite side



STEP 10

The installation is now complete