

# INSTALLATION & CARE

## 2016-2021 TOYOTA TACOMA LED TAIL LIGHT INSTALLATION INSTRUCTIONS

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

¼" Ratchet	Trim Pad Remover	10 mm Socket	
			

### PRODUCT NUMBER

LT-TAC16JMLED-TM    LT-TAC16BBLED-TM  
 LT-TAC16RLED-TM    LT-TAC16BKLED-TM  
 LT-TAC16GLED-TM




### LET'S START THE INSTALLATION




**STEP 1**

Remove the two 10mm bolts

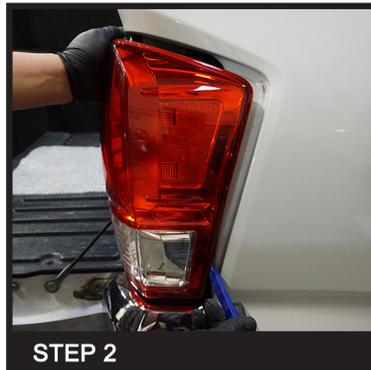


**STEP 2**

Uninstall the factory tail light housing

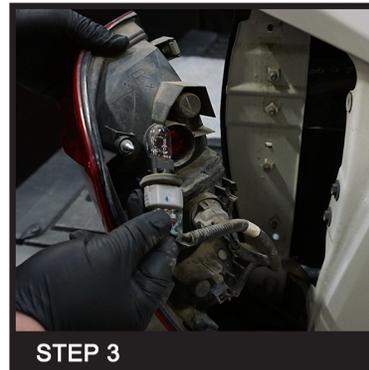

**STEP 3**

Disconnect the wire connectors

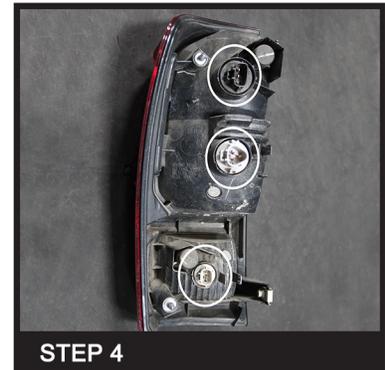

**STEP 4**

Remove all 3 light sockets from the factory tail light housing




**STEP 5**

Remove the brake light bulbs and the signal light bulbs from the light socket




**STEP 6A**

Install the light sockets

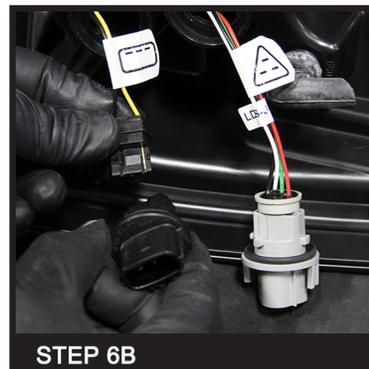

**STEP 6B**

Make sure to insert to the same shape shown on the label

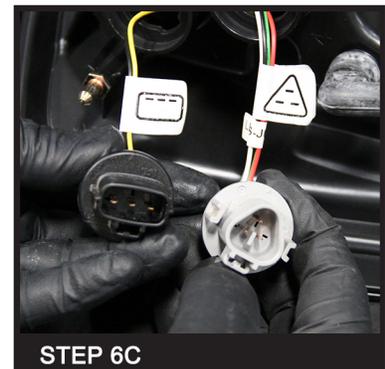


**STEP 6C**

Make sure to insert to the same shape shown on the label



**STEP 6D**

Make sure to insert to the same shape shown on the label

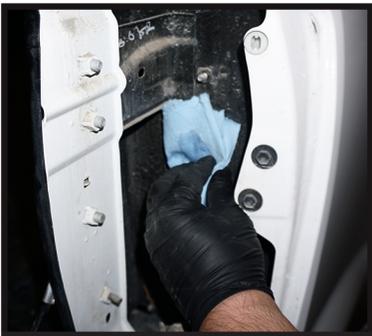

**STEP 7**

Use alcohol to clean the metal surface to apply the resistor




**STEP 8**

Set the new tail light resistor on the metal surface



**STEP 9**

Connect all light socket connectors and resistor wires

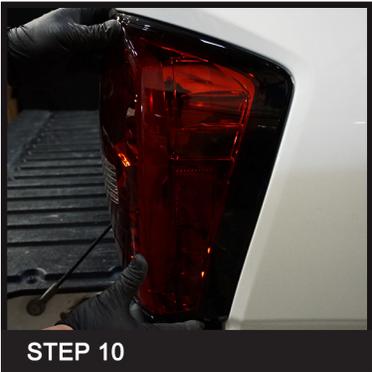


**STEP 10**

Install the new tail light housing



**STEP 11**

Tighten the two 10mm bolts

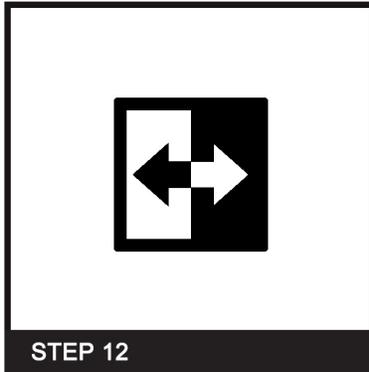

**STEP 12**

Please repeat the steps from 1 to 11 for the opposite side



**STEP 13**

Close the tailgate to complete the installation

