

SPEC-D *Tuning*

2006-2008 TOYOTA YARIS 3DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.




An assistant is useful when removing the front bumper from your vehicle.


Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

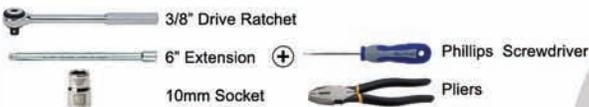

If your Headlight is Halo type, you also need:

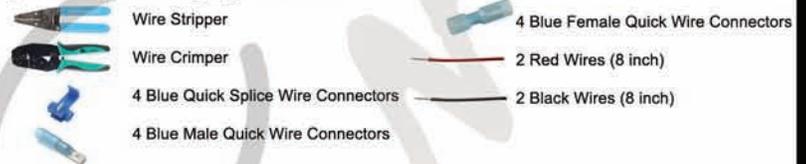

Product Part Numbers:

2LHP-YAR063JM-TM

2LHP-YAR063G-TM

2LHP-YAR063-TM



2006-2008 TOYOTA YARIS 3DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (8) 10mm bolts location



2. Remove (8) 10mm bolts




3. Remove the plastic clips



4. Remove the Phillips head screw



5. Plastic clip location

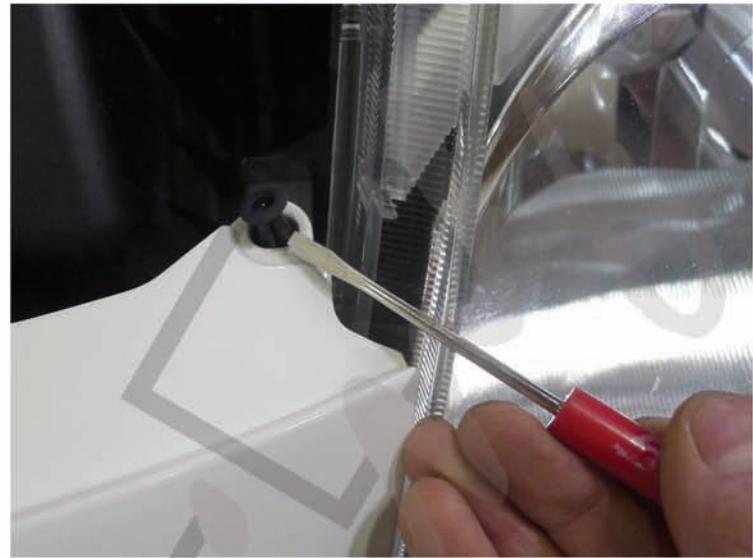

6. Remove the plastic clip



7. Remove the front bumper



8. Remove the 10mm bolt



9. (2) 10mm bolt location



10. Remove the 10mm bolt



11. Remove the factory headlight



12. Unclip the harness retainer from the headlight




13. Disconnect the headlight harness




14. Remove the clear bulb



15. Connect the LED light connector to the parking light socket
Please see the "Halo and L. E. D. headlights installation instructions"
If your headlights don't have Halo and L. E. D. You can skip the installation instruction.

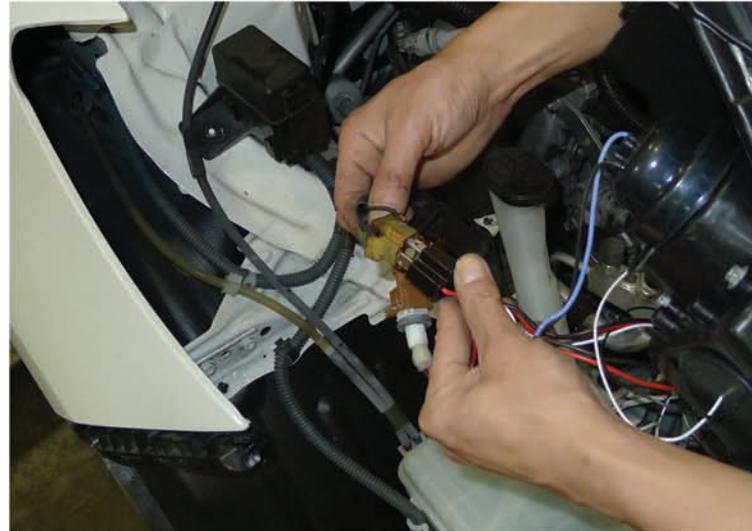

16. Connect the headlight harness

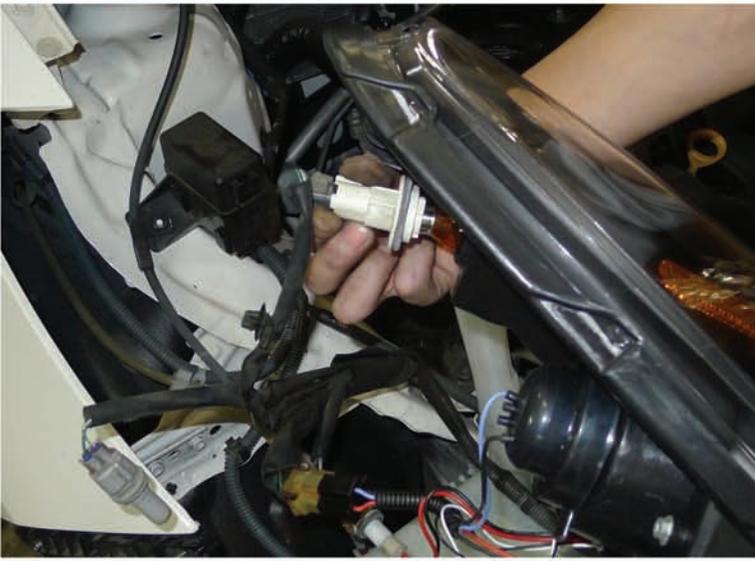

17. Install the turn signal light socket



18. Place the projector headlight in the stock position



19. Tighten the 10mm bolt



20. Tighten the 10mm bolt



21. Replace the front bumper



22. Replace the (5) plastic clips



23. Replace the (5) plastic clips



24. Replace the plastic clip



25. Tighten the Phillips head screw



26. Tighten the (8) 10mm bolts



27. Tighten the (8) 10mm bolts
Please repeat the steps from 1 to 27 for the opposite side



28. The Installation now is complete