

INSTALLATION & CARE

2015-2017 FORD F150 PROJECTOR LED TWO-STYLE HEADLIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	8 mm Socket	10 mm Socket	7/16" Socket
1/4" Socket Extension	Trim Pad Remover	Plastic Pry bar	

PRODUCT NUMBER

2LHP-F15015-SQ-RS
2LHP-F15015JM-SQ-RS
2LHP-F15015BK-SQ-RS
2LHP-F15015G-SQ-RS


LET'S START THE INSTALLATION



STEP 1



STEP 2

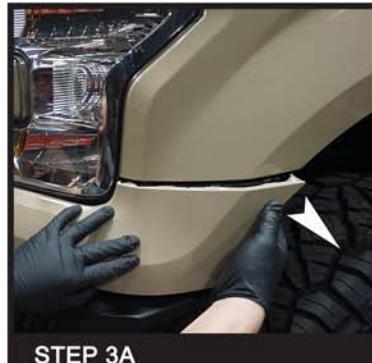

STEP 3A



STEP 3B

Remove the two 7/16" bolts

Remove the plastic fastener clip

Remove the headlight trim molding

Remove the headlight trim molding



STEP 4



STEP 5

Remove three 10mm bolts and one 8mm bolt at the front of the headlight trim support

Remove another three 10mm bolts at the side of the headlight trim support



STEP 6

Unclip the headlight trim support



STEP 7

Push down the headlight trim support for more space




STEP 8

Remove the 10mm headlight mounting bolt at the side of the grille




STEP 9

Remove the two 10mm headlight mounting bolts at the top

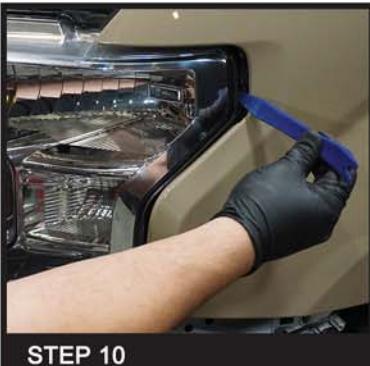

STEP 10

Unseat the factory headlight housing

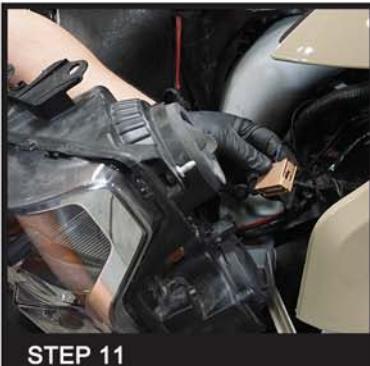


STEP 11

Disconnect the headlight harness and remove the factory headlight housing



STEP 12

Remove the parking light socket and the signal light socket from the OE headlight housing

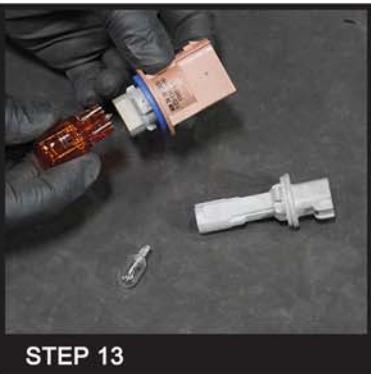

STEP 13

Remove the light bulbs from the parking light socket and the signal light socket



STEP 14A

Install the signal light socket to the new headlight housing, (+) to (+) and (-) to (-)



STEP 14B

Install the signal light socket to the new headlight housing, (+) to (+) and (-) to (-)




STEP 15A

Install the parking light socket to the new headlight housing, (+) to (+) and (-) to (-)



STEP 15B

Install the parking light socket to the new headlight housing, (+) to (+) and (-) to (-)

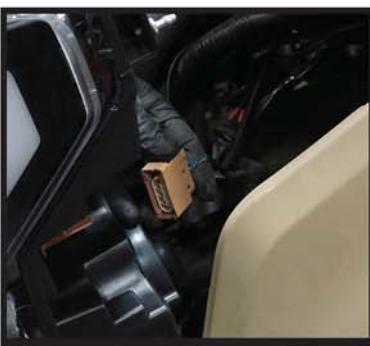

STEP 16

Reconnect the headlight harness and seat the new headlight assembly in place




STEP 17

Reinstall the two 10mm headlight mounting bolts at the top



STEP 18

Reinstall the 10mm headlight mounting bolt at the side of the grille

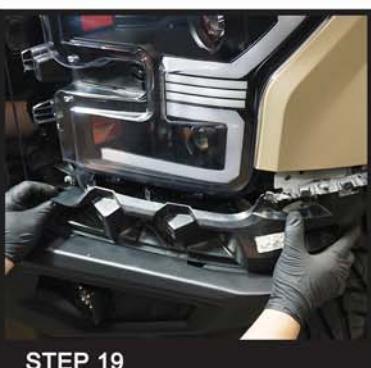

STEP 19

Reinstall the headlight trim support



STEP 20

Reinstall the three 10mm bolts on the side of the headlight trim support



STEP 21

Reinstall the three 10mm bolts and one 8mm bolt at the front of the headlight trim support



STEP 22

Reinstall the headlight trim molding




STEP 23

Reinstall the plastic fastener clip



STEP 24

Reinstall the two $\frac{7}{32}$ " bolts

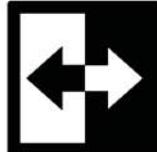

STEP 25

Please repeat the steps from 1 to 24 for the opposite side



STEP 26

Close the hood and complete the installation



SEQUENTIAL SIGNAL CONTROL BUTTON INSTRUCTIONS



Style 1: Only the three light bars on center

Style 2: The light bar from top & bottom to center (Except the three light bars on center)

Press the button to change the Sequential style when the signal light is off