

# INSTALLATION & CARE

## 2018-2021 TOYOTA CAMRY LED TAIL LIGHT INSTALLATION INSTRUCTION

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.


### TOOLS AND SUPPLIES REQUIRED

¼" Ratchet	Trim Pad Remover	10 mm Socket	Flathead Screwdriver
			

### PRODUCT NUMBER

LT-CAM18JMLED-SQ-RS  
 LT-CAM18BKLED-SQ-RS  
 LT-CAM18SMLED-SQ-RS  
 LT-CAM18BZLED-SQ-RS

### LET'S START THE INSTALLATION

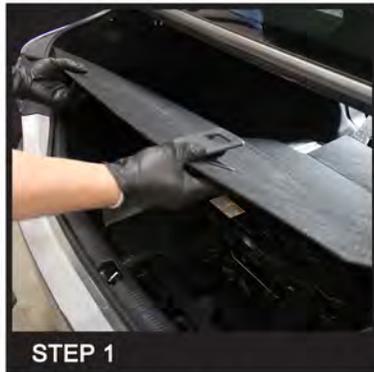

**STEP 1**

Remove the trunk liner mat



**STEP 2**

Remove the four plastic retainers on the rear panel trim



**STEP 3**

Remove the rear panel trim




**STEP 4**

Press the middle to release the plastic retainer



**STEP 5**

Disconnect the outer tail light harness

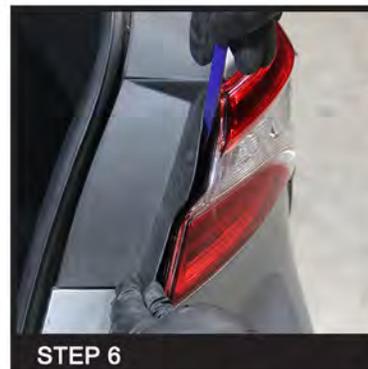


**STEP 6**

Remove the tail light finisher



**STEP 7**

Remove the two 10mm outer tail light mounting bolts

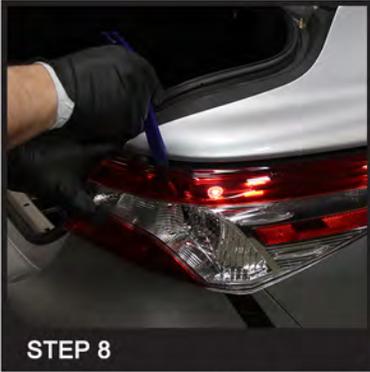

**STEP 8**

Unseat the factory outer tail light housing



**STEP 9**

Remove the wire rubber grommet




**STEP 10**

Remove the factory outer tail light housing and the tail light harness




**STEP 11**

Run the tail light harness through the trunk

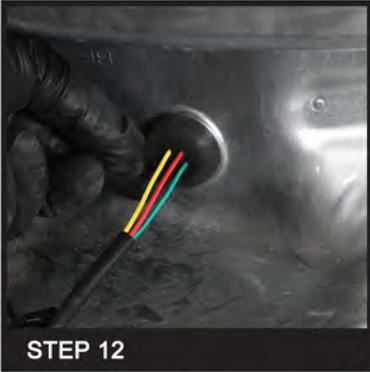

**STEP 12**

Install the wire rubber grommet

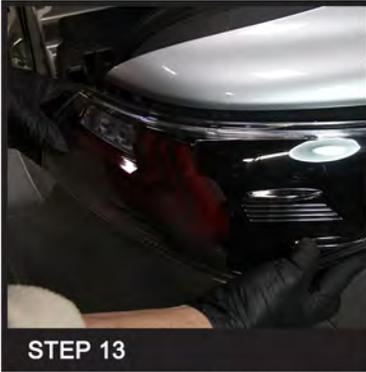

**STEP 13**

Seat the new outer tail light assembly in place



**STEP 14**

Reinstall the two 10mm outer tail light mounting bolts



**STEP 15**

Reinstall the tail light finisher



**STEP 16**

Connect the tail light harness



**STEP 17**

Please repeat the steps from 4 to 16 for the opposite side



**STEP 18**

Remove the thirteen plastic retainers on the trunk lid lining



**STEP 19**

Remove the trunk lid lining



**STEP 20**

Disconnect the inner tail light harness



**STEP 21**

Remove the three 10mm inner tail light mounting nuts



**STEP 22**

Remove the factory Inner tail light housing



**STEP 23**

Seat the new inner tail light assembly in place



**STEP 24**

Reinstall the three 10mm inner tail light mounting nuts



**STEP 25**

Connect the inner tail light harness, item also come with the short wire harness converter for factory non-LED tail light model



**STEP 26**

Remove the plastic retainer on the trunk hinge cover



**STEP 27**

Remove the trunk hinge cover



**STEP 28**

This is the extension wire harness



**STEP 29**

Connect the extension wire harness to the inner tail light harness



**STEP 30**

Zip tie the extension wire to the trunk hinge, be very careful to make sure the wire have enough length to close the trunk



**STEP 31**

Connect the other end of the extension wire harness to the outer tail light harness, be very careful to make sure the wire have enough length



**STEP 32**

Double check to make sure the wire have enough length to close the trunk




**STEP 33**

Reinstall the trunk hinge cover



**STEP 34**

Reinstall the plastic retainer on the trunk hinge cover

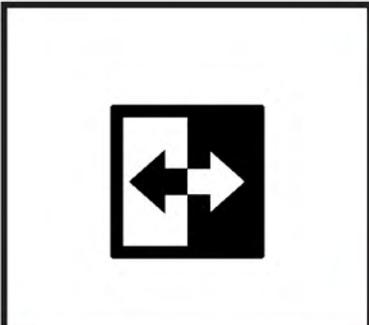

**STEP 35**

Please repeat the steps from 20 to 34 for the opposite side



**STEP 36**

Reinstall the trunk lid lining



**STEP 37**

Reinstall the thirteen plastic retainers on the trunk lid lining



**STEP 38**

Reinstall the plastic retainer on the trunk lining



**STEP 39**

Reinstall the rear panel trim



**STEP 40**

Reinstall the four plastic retainers on the rear panel trim



**STEP 41**

Reinstall the trunk liner mat



**STEP 42**

Close the trunk to complete the installation

